



Upgrading Your MAX Receiver to Version 5.3

First Check Your Current Version

Upgrading your MAX receiver should pose no difficulty and should take under 15 minutes to complete. The first step is to download the upgrade file to the computer you are going to be performing the upgrade from.

To download click on this link or copy and paste it in to your web browser:

[ftp://ftp.datacast.com/upgrades/SFX3101F%20Pro%20Audio%20\(MAX\)/5.3/FC5_Upgrade2_Kore4.12to5.3_LA2.9to3.2_PA2.5to3.2_XD2.0to2.1.idc](ftp://ftp.datacast.com/upgrades/SFX3101F%20Pro%20Audio%20(MAX)/5.3/FC5_Upgrade2_Kore4.12to5.3_LA2.9to3.2_PA2.5to3.2_XD2.0to2.1.idc)

Username: WWAffiliates
Password: max123

Make sure to check which firmware version you currently have. Via the receiver web GUI click on "Identity" and look at the "Firmware Version". OR on the front panel of the receiver click the down arrow until you see "Info" then click the green check mark and that will show you the "Firmware Version" (You may have to scroll to the right or left to see the firmware version).

You NEED Firmware version 4.12 to perform this upgrade properly

To Install the Upgrade

Ensure connectivity to the MAX receiver GUI via your computer or network. If you need help doing this please go to <http://www.setupmax.com>. There you can find the setup guide and tips on connecting to the MAX receiver GUI.

In your default web browser type in [http://\(receiver IP address\)](http://(receiver IP address)). For instance: <http://192.168.0.1> You should see a screen saying that there is a problem with the website's security certificate. Click the "Continue to the website (not recommended)" link

The next page will be the login screen. The Username is "admin" the Password is "12345" (unless you have changed it manually). Click "Login"

At the top right click the tab for "Upgrade". When the Upgrade window appears click the "Browse" button and navigate to where you saved the upgrade file to. Select the file and click "Open".

On the left side, click "Send Upgrade" and in about 10 minutes the upgrade will be sent and the receiver will reboot.

If the receiver stays in a "REBOOTING" mode for longer than 10 minutes, pull the plug on the receiver, wait 60 seconds and plug it back in. When it comes up it will be upgraded and working properly.

After the reboot is finished the receiver is upgraded. You can verify the version by logging back on the receiver's GUI, click on the identity tab in the upper left and next to "Firmware Version" it should say "5.3" and "DAs" should be blank.